

SPACE-PLUG

Professional simplicity for everyone

One Space-Plug is required centred on any single base unit and two evenly spaced in any double unit. Depending if you have Space-Plug Reg or XL You'll want 150mm or 200mm drill bits suitable for your choice of wall fixing and appropriate screws.




Step 1 - Drill

With the cabinet in place, drill a pilot hole through the cross-brace, then drill directly into the wall behind and insert your wall-plug.



Step 2 - Thread a screw

Pass a screw through the cross brace, through the **SPACE-PLUG** and locate it into the still visible wall-plug.

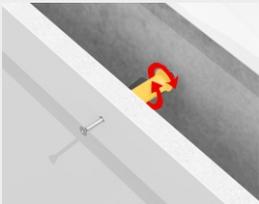

Step 3 - Bridge the gap

The clever bit! Just unwind the **SPACE-PLUG** until it firmly contacts both surfaces.



Step 4 - Just tighten the screw

And it's fixed!.....with

SPACE-PLUG

Designed & Made
in Britain 

www.space-plug.com



Watch the video **NOW**