

## List of Parts required



PZ2 Screwdriver x 1



Drill bit either 2.5mm or 5mm diameter dependant on which screw style\* is to be used to fix runners to cabinet



Hand drill to produce holes in cabinet (assuming not already produced)




Tape measure to locate fixing points in cabinet as detailed in following pages


Note: Alternatively, specific jigs are available from [www.blumkit.co.uk](http://www.blumkit.co.uk) for fast & accurate installation

\*For information on screws of fixing methods to suit the materials used, please refer to your carcass drawer supplier. For number, and position of fixings see <https://publications.blum.com/2018/catalogue/en/260/>

Typical cabinet assembly

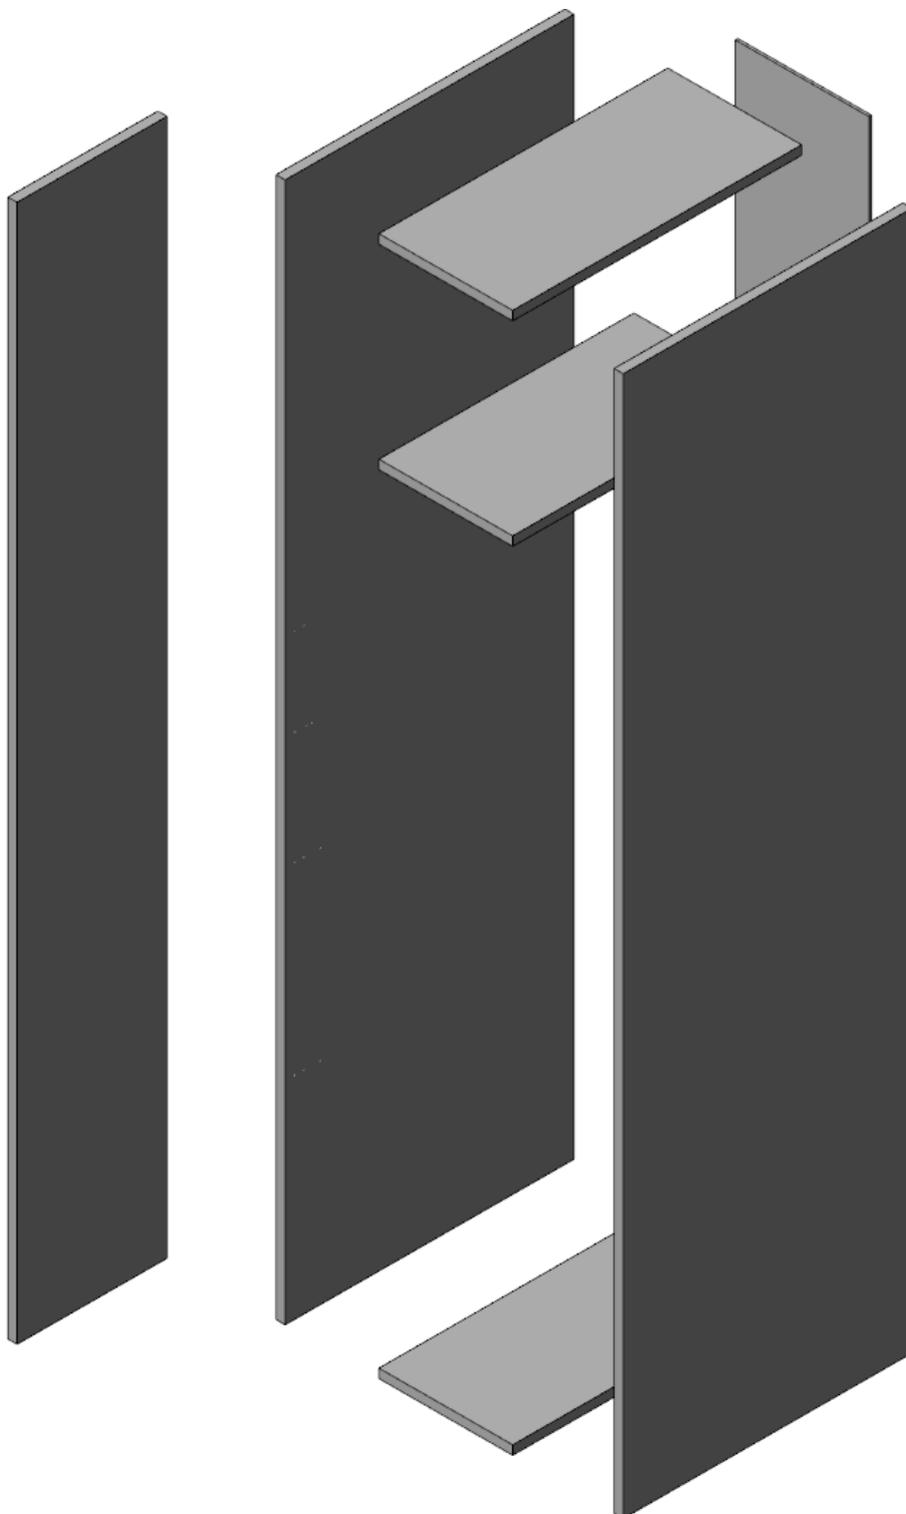


Note: 20mm drilling point for horizontal plates, 37mm for cruciform (we recommend to use 3 fixing points in either case)

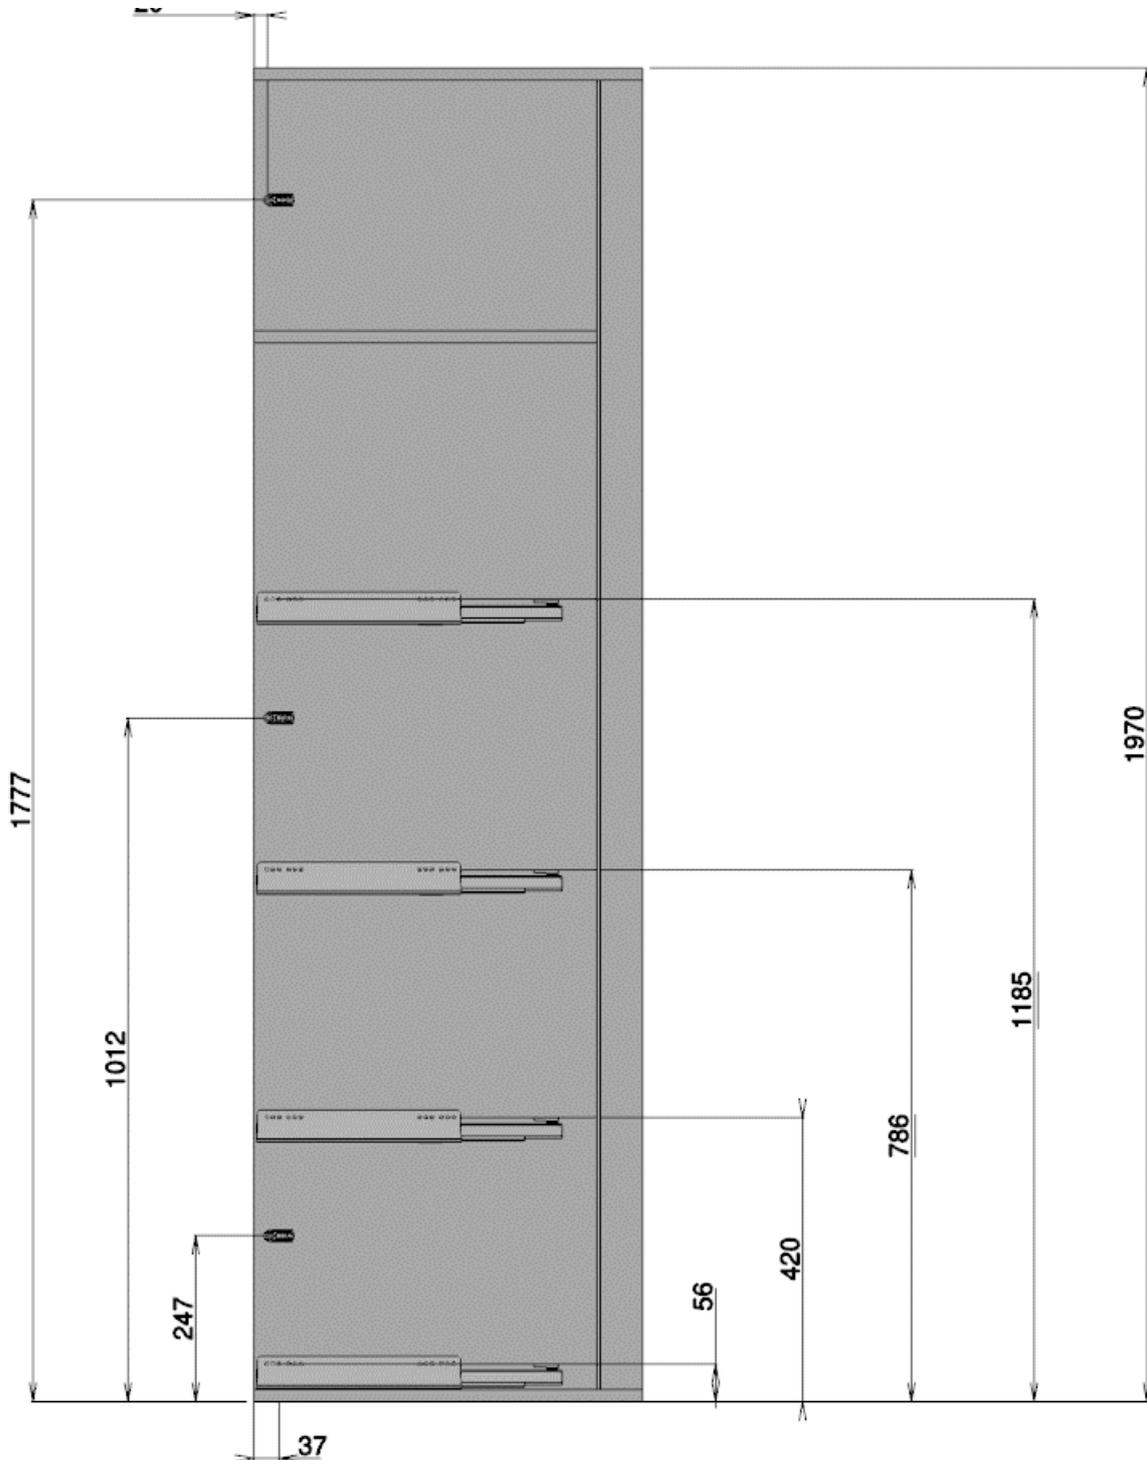


Drawer assembly

X4


1

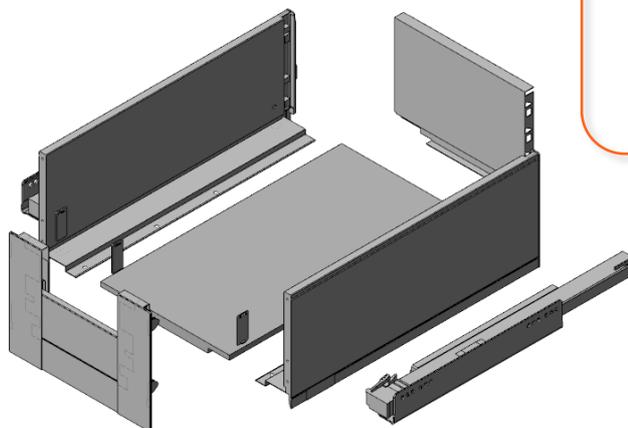


2

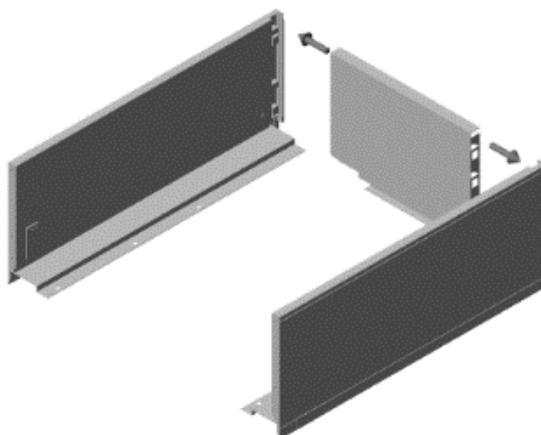


3

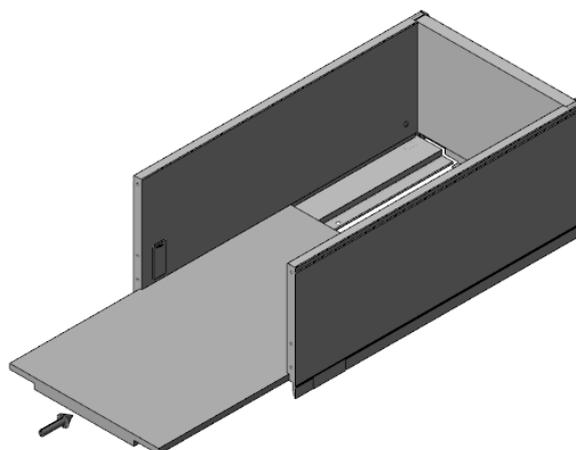

4

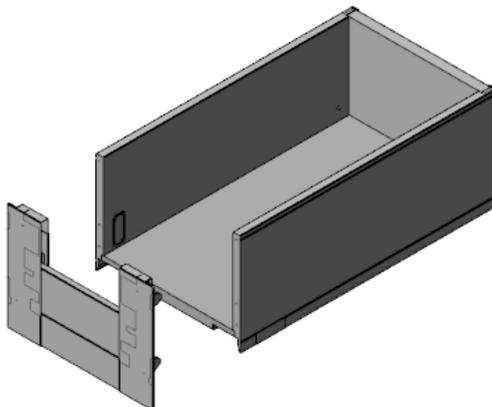

5

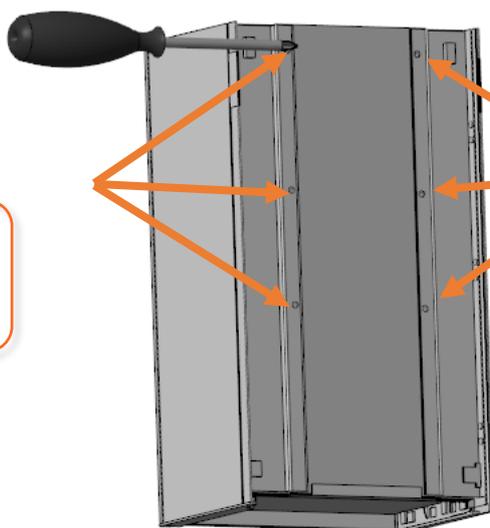

Screws x 6  
Per drawer

6

