Glide Sliding Doors



Order Form

Return to: Hill's Panel Products Ltd. Scottfield Road Oldham OL8 1LA

Tel: 0161 620 5656 Fax: 0800 146 209 E-Mail: sales@hpponline.co.uk

Company/Invoi			Delivery Ado	Delivery Address: (if different)					
Postcode:		Telephone:				Telephone:			
		Fax:							
Account No.				Contact Nan	ne:				
Order Ref:			Date Ordered:	/	/	Date Required:	/	/	
Frame	Primo	Aluminiu	m Black	Brushed Pea	rl				
Style &	Lucine		O	·····			Internal Width		
Colour:	Ronda		0	0					
								Internal	
Aperture	Details:							Height	
Internal Height:		mm	Internal Width:	ı	mm				
			mm up to 1220mm. Please s, the result is within that rang		vide				
Door Deta	ails:						FLOOR		
	Doo	r 1	Door 2	Door 3		Door 4			
No. of Panels.	1	3	1 3	1 3	3	1 3			\exists
Quantity								1	
Panel 1				I				•	
Material									

†Note: Adhesive dividers are an optional extra that can be used to split panels, giving the visual effect of a multiple panel door.

PLEASE NOTE: HPP accepts no liability for the suitability of goods supplied to the buyers own measurements. Your attention is drawn to our full Terms & Conditions at hpponline.co.uk/TandCs.

Customer Signature

Example Door

Number of Adhesive Divider Strips Required Per Door[†]

Colour

Colour

Panel 3 (if required)

Material

Panel 2 (if required)

Material





Fitting Instructions




1. Lock the soft close assembly once the door is in the track (1.1)

The assembly can be unlocked if required. (1.2)













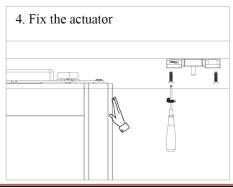

Bottom Track

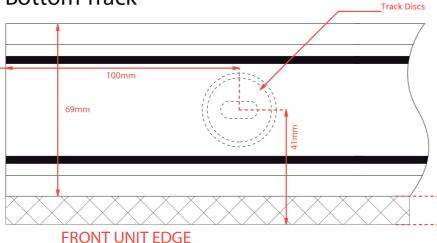

One disc should be placed 100mm from each side of the unit with the remaining discs spaced equally over the unit's width (Fig. 1)


If top track is flush with front edge of unit, centre of discs should be placed 41mm from the front edge





Once the discs have been fitted to the unit base (Fig. 1), the track can be fitted in place over the discs (Fig. 2)

Soft Close Door Configuration

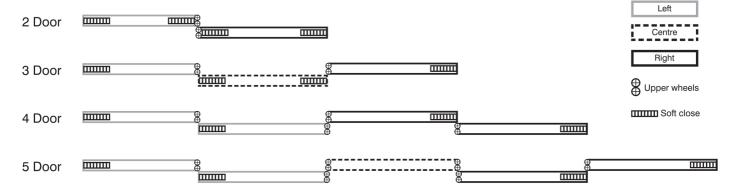

Height Adjustment

* We recommend lying the door on its side or supporting its weight before adjusting the wheels *
Adjusting the wheels while the door is in situ could cause damage to the mechanism due to the weight of the door



- Lift the rubber seal.
- Using a 4mm allen key, loosen but DO NOT REMOVE the screw.
- The middle screw unlocks & locks the wheels into place once the height has been set.



- Lift the rubber seal.
- · Use a 4mm allen key.
- The bottom screw adjusts the height of the door:
 - o Clockwise Up
 - o Anti-clockwise Down
- DO NOT REMOVE THE SCREW.